



INSTALLATION INSTRUCTIONS

COOL FLOW ALUMINUM OIL FILTER HOUSING: 1.8T & 2.0T GEN 3

SKU# 8028 MFG# 06K115408AL

INSTRUCTIONS ARE ALSO AVAILABLE ONLINE FOR A MORE ENHANCED VIEWING.
PLEASE VISIT WWW.USPMOTORSPORTS.COM AND SEARCH SKU# 8028



TOOLS REQUIRED

- 32MM SOCKET
- RATCHET OR ADJUSTABLE WRENCH
- RAGS OR PAPER TOWELS

WHAT'S INCLUDED

- COOL FLOW ALUMINUM OIL FILTER HOUSING



THIS MATERIAL IS FOR REFERENCE ONLY. IMPROPER INSTALLATION OR MISUSE OF THIS PRODUCT COULD RESULT IN FAILURE OR DAMAGE. USP MOTORSPORTS IS NOT RESPONSIBLE FOR ERRORS OF INSTALLATION, LOSS OR DAMAGES RESULTING FROM DEPENDENCE ON THIS MATERIAL.

888.755.7772 /// 1919 NW 40TH COURT, POMPANO BEACH, FL 33064 /// WWW.USPMOTORSPORTS.COM

INSTALLATION INSTRUCTIONS

COOL FLOW OIL FILTER HOUSING
1.8T & 2.0T GEN 3

usp motorsports

2

1. Begin by locating your OEM oil filter housing and remove using either a 32mm socket and ratchet or an adjustable wrench.




2. Remove the used filter by pulling it directly out




3. Remove the filter retaining clip by applying pressure perpendicular to the length of the filter housing.




4. Install the new o-ring on the new aluminum oil filter housing by sliding down over the threads as shown.

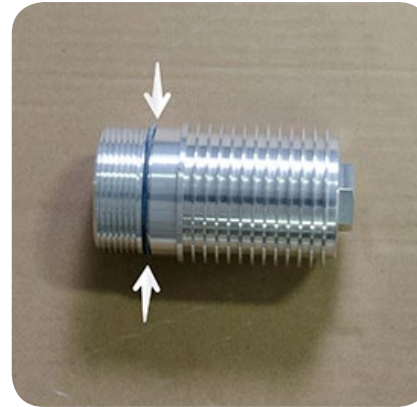

5. Slide the new filter onto the filter retaining clip until it bottoms out as detailed in the picture.

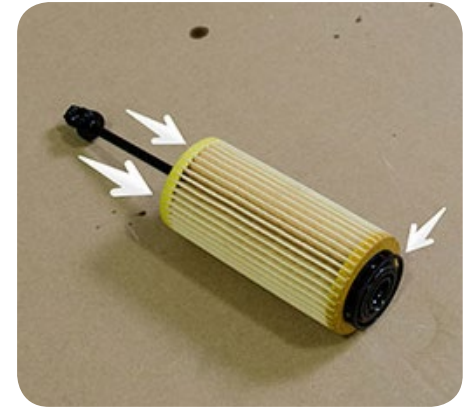

6. Insert the filter and retaining clip assembly inside the new oil filter housing. Once it has reached the bottom apply pressure to the bottom of the filter housing and the top of the filter until it clicks into place.

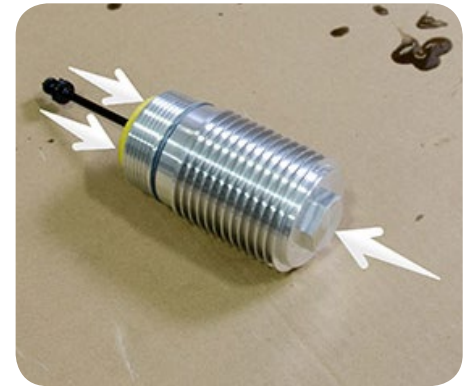

7. Install the new filter housing assembly onto the motor and torque to 25Nm, which is noted on the housing. ENJOY YOUR NEW FILTER HOUSING!